


Introduction

This guide will allow you to install the Amusement Connect MobileMech on a mechanical pool table. These instructions will take you through the installation process using the universal harness

Parts Required:

- MobileMech
- Universal Wiring Harness
- SliderMech Add-On Harness
- Electrical Tape or Heat shrink
- Zip-Ties
- Cable Tie Mount
- Wire Cutter
- Gorilla Tape or Double Sided Tape

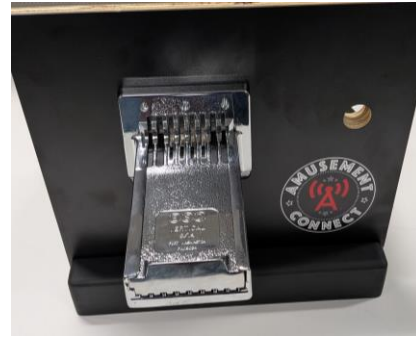

Pre-Installation Requirements

Before beginning the installation, ensure that the following requirements are met:

AC Location Activation

The game machine asset and MobileMech device must be assigned to an available location name under your organization in the Amusement Connect Operator Dashboard. Complete the [Location Setup Request Form](#) if a new location needs to be created.

Game Machine Asset Setup


To properly function after installation, the powered MobileMech device must be assigned to an active Game Machine Asset within the Operator Dashboard. To create a new Game Machine Asset, follow the Quick Start Guide process.

Connectivity


Wi-Fi configuration requires access to the router SSID and password. A 2.4 GHZ network is required to connect the MobileMech device to Wi-Fi.

Mechanical Pool Table Universal Harness

Prepare Harness

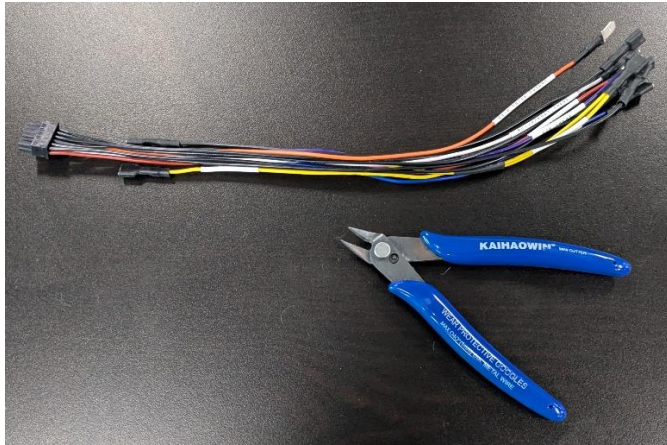


1) Remove the zip tie around the harness.

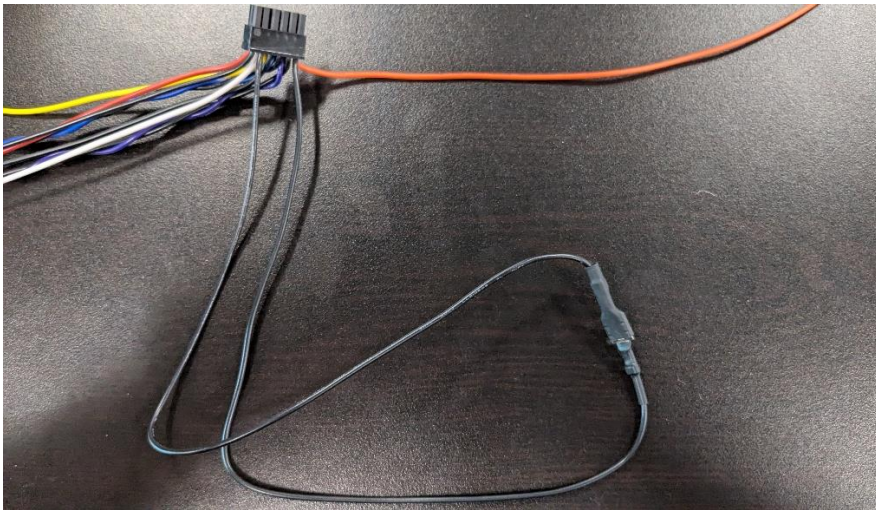

Connect the ground wire from the **White/Black** pair to the ground of the **Orange/Black** pair. The wires will have quick connect connections.




2) Connect the ground wires.

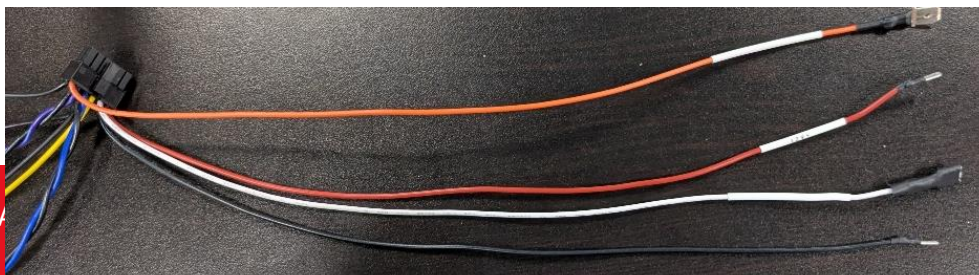


Orange/Black = Coin Out/Ground
Purple/Black = Unused
Blue/Black = Unused
Yellow/Black = Unused
White/Black = Pool Input/Ground
Red/Black = 12v+/Ground

3) Identify the **Orange** pulse output line, **Red 12v+** and paired **Black/ground** and **White** pool input.

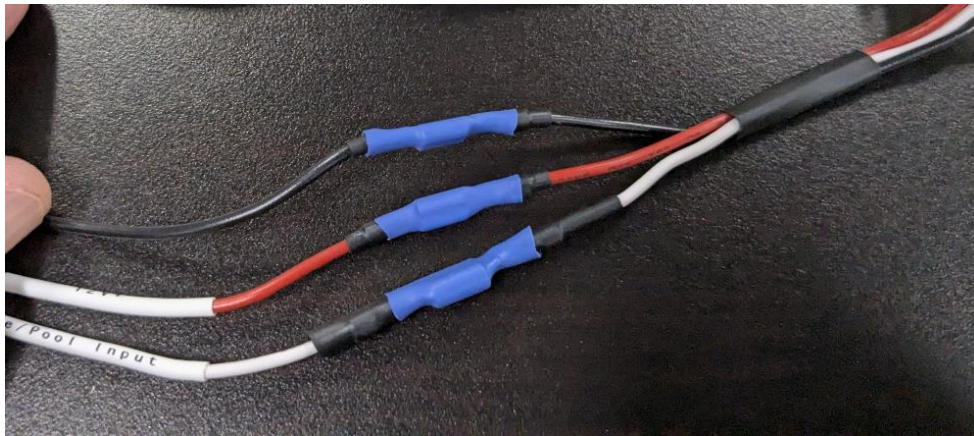

4) Connect the **Black** from the pool table add-on harness to the **Black** of the MobileMech harness. Connect the **Red** of the pool table add-on harness to the **Red 12V+** of the Mobile Mech harness. Conenct the **White** from the pool table add-on harness to the **White/Pool Input** of the MobileMech hareness. Finish connection with heat shrink.

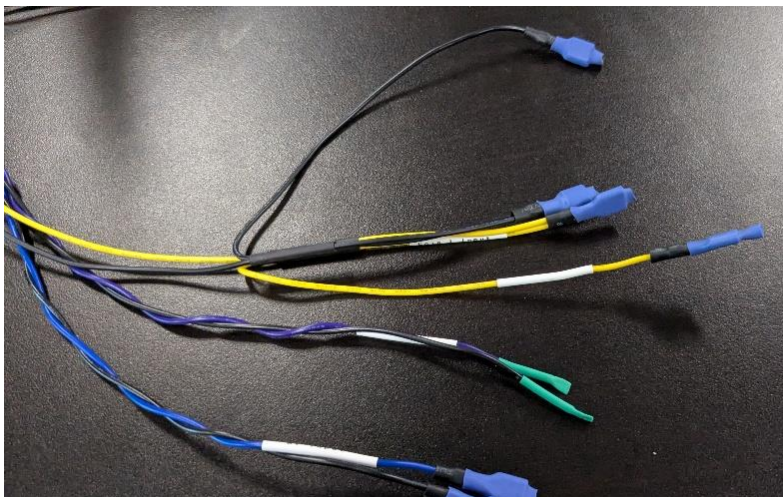

5) Apply electrical tape or heat shrink to unused wires.



6) Ziptie unused wires together.


Installation



1) Begin by running the harness from the Slidermech through the opening in coin door.




2) Secure the Slidermech to the coin door.

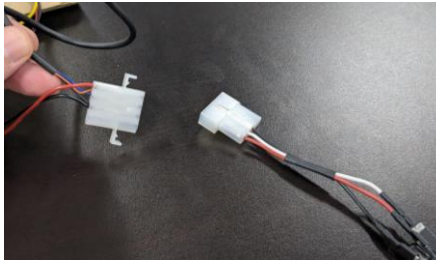

3) Connect the Molex from the Slidermech to the Molex on the AmusementConnect MobileMech harness.



4) Secure the MobileMech to the pool table door using screws, or double-sided tape. Connect the AmusementConnect MobileMech harness connector to the MobileMech.

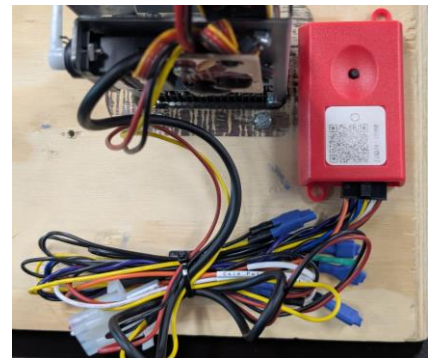

5) Bundle and secure the wires to the back of the coin door using zip-ties and cable tie mounts.